

NGM EVO

www.promax.it

User Guide



The information contained in this document are for informational purposes only and are subject to change without notice and should not be interpreted by any commitment by Promax srl. Promax Ltd. assumes no responsibility or liability for errors or inaccuracies that may be found in this manual. Except as permitted by the license, no part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical, recording or otherwise without prior permission Promax srl. Any references to company names and products are for demonstration purposes only and does not allude to any actual organization.

Rev. 3.00.4

1 Features

The system **NGMEVO** is a numerical control based on the Freescale MCF52259.

NGM EVO CPU

- *Microprocessor type MCF52259 up to 80MHz*
- *192 KbFlash*
- *32 Kb RAM*
- *16/32 Kb FRAM Permanent Memory*
- *1 ETHERNET port 10/100 Mb RJ45*
- *2 RS232 ports (1 RS485)*
- *1 CAN OPEN Master/Slave*
- *8 analog-inputs 12 bit configurable (0-10V dc) or (4-20mA)*
- *1 Analog Output 0-10 V*
- *16 Digital Inputs PNP 24 Vdc*
- *14 Digital Outputs PNP 24 VDC up to 1 A*
- *4 Channels STEP/DIR 400 Khz Position Mode, 125 Khz Interpolation Mode. Line Drive or Open Collector*

NGMIO EXPANSION (Max 4 Expansions) ¹⁾

- *16 Digital Inputs PNP 24 Vdc*
- *14 Digital Outputs PNP 24 VDC up to 1 A*

NGMsX EXPANSION (Max 3 Expansions) ¹⁾


- *2 Channels STEP/DIR 500 Khz Position Mode e Interpolation Mode. Line Drive*
- *2 Channels encoder Line Drive 500 Khz*
- *2 Analog Outputs +/- 10V 12 bit*

¹⁾ The max number of expansions combined, NGMIO and NGMsX is 7

2 Identification Code NGM EVO

ORDER CODE NGM EVO	
NGMEVO/	  -  -  -  xxx  xxx
0	Without STEP/DIR
1	4 – STEP/DIR Channels Open Collector
2	4 – STEP/DIR Channels Line Drive
0	Without ETHERNET
1	1 - ETHERNET Port 10/100 Mb RJ45
0	2 - RS232
1	1 - RS232 1 - RS485 on SER2
B	Analog Inputs 0-10V
C	Analog Inputs i 4-20 Ma
0	Without Analog Outputs
1	1 – Analog Output 0-10 V on Digital Out 1
0	16 Kb FRAM Permanent Memory
1	32 Kb FRAM Permanent Memory
xxxxxxx – Number configured channels analog inputs ex: B123 – Channels 1,2,3 - 10 Volt	
ORDER CODE NGMIO	
NGMIO	
ORDER CODE NGMsX	
NGMsX/	  
1	1 – Channel STEP/DIR Line Drive 500 Khz
2	2 – Channels STEP/DIR Line Drive 500 Khz
0	Without Encoder Channel
2	2 – Channels Encoder Line Drive
0	Without Analog Output
1	2 – Analog Outputs +/- 0V
Possible combinations: NGMsX/2-0-2 NGMsX/1-2-2 NGMsX/2-0-0 NGMsX/1-2-0	

3 NGM EVO Connections

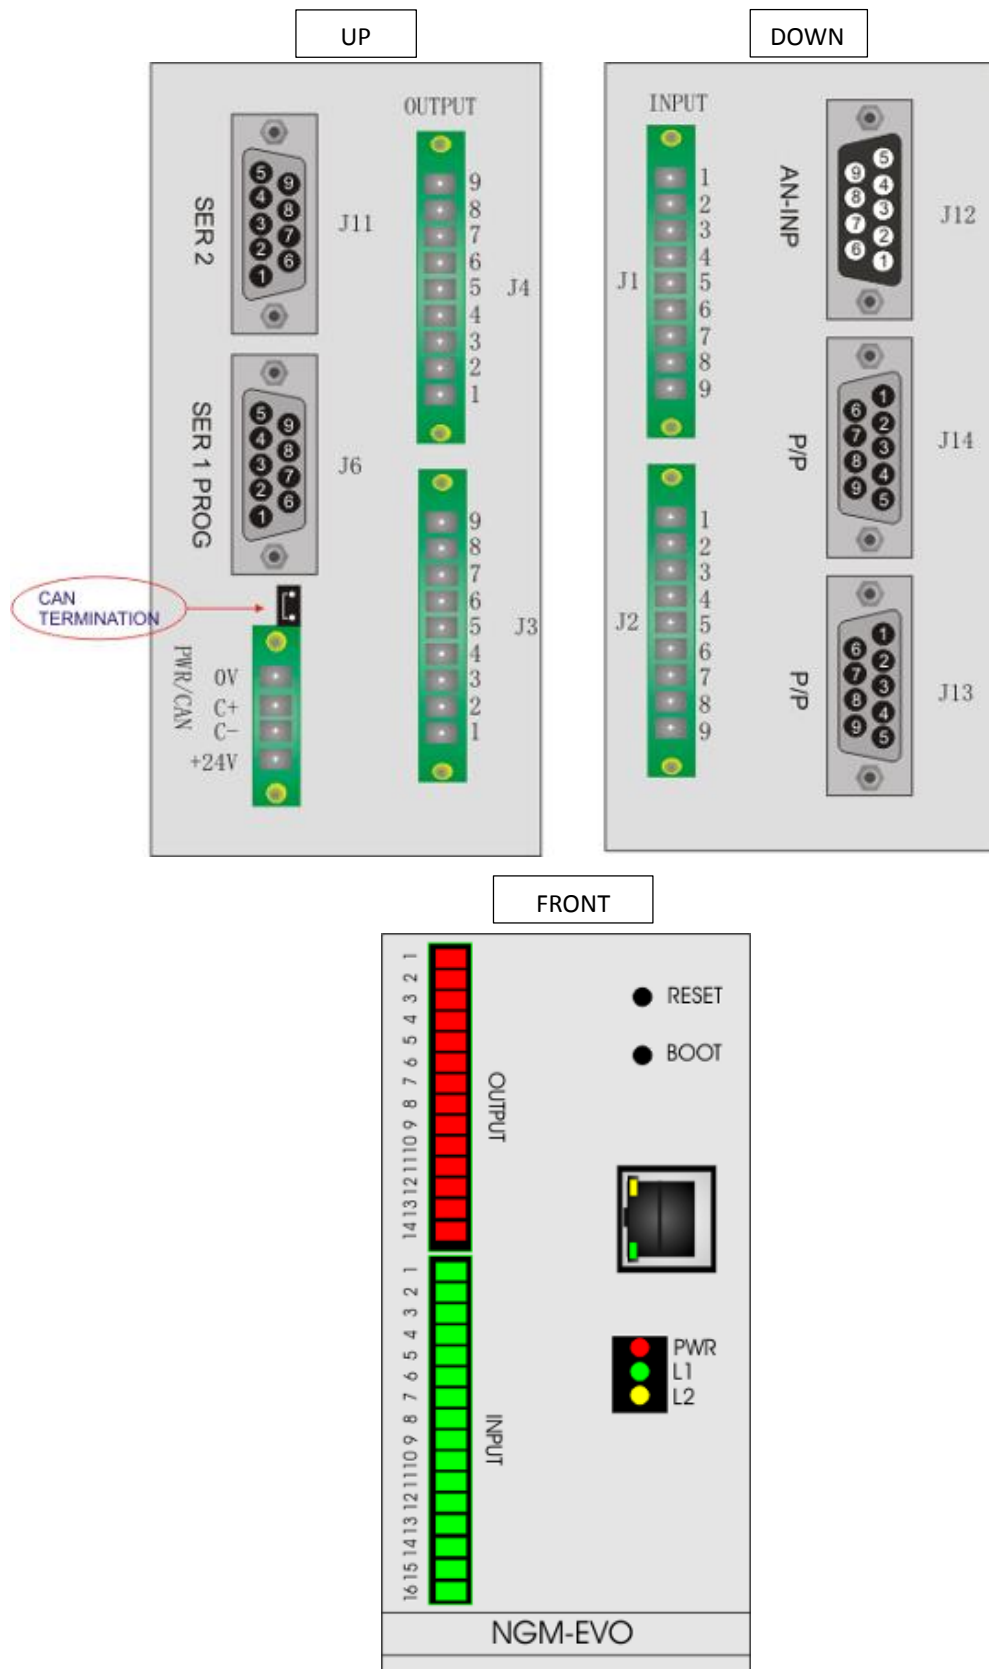

4 Connections Description

4.1 Power

The NGMEVO requires two separate power supplies:

- **Logical Power, PWR**
- **Digital Outputs Power, J3 e J4**

To supply the digital outputs, see the relevant [chapter 4.9](#)

As regards the supply of the logic section, this is necessary for normal operation of the card



4.1.1 Electrical Characteristics

	U.m.	Min	Standard	Max
DC IN	Vdc	12	24	35
Power (to 24Vdc)	W		2,6	

THE SYSTEM IS PROTECTED FROM POLARITY INVERSION



WARNING
DO NOT EXCEEDS THE MAXIMUM VOLTAGE VALUE ADMITTED
BECAUSE THE CARD CAN BE DAMAGED

4.2 Serial Ports

The serial ports on the **NGMEVO** allow communication with external devices to the control, PC-type, PLC and other.

- **SER1-PRG:** is normally used both for the download of the programs on the control, both for the debugging from a PC application. It is also the port to use for updating the firmware
- **SER2:** Can be used for communication with other devices, such as a PLC, inverters or other. **CAN BE CONFIGURED RS485 MODE.**

For the electrical signal, the serial ports are in compliance with RS232/RS485.


Use a **CABLE WITH SHIELD** for serial ports connections

Connect the **SHIELD to PIN 5** SER1 or SER2 to NGMEVO ports

Generally the RS232 connection, uses a NULL MODEM cable (pin 2,3,5) CROSSOVER (with inversion on pin 2,3)


Always check the external device that type of connection it accepts

RS232



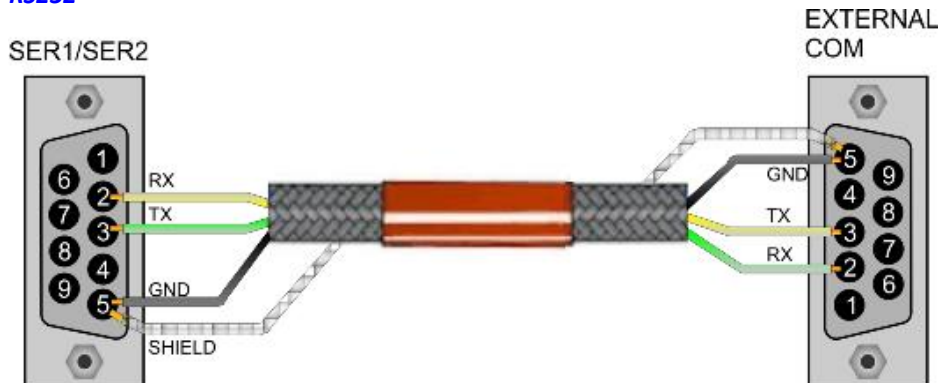


RS485

Normally the GND pin is not connect

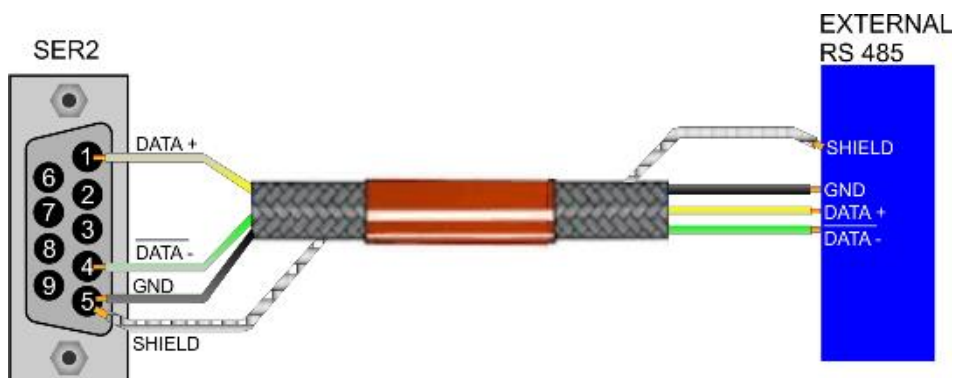

4.2.1 Connections J6 SER1/PROG – J11 SER2

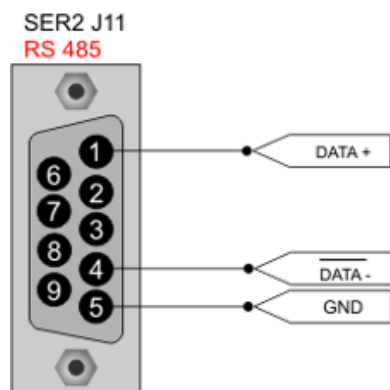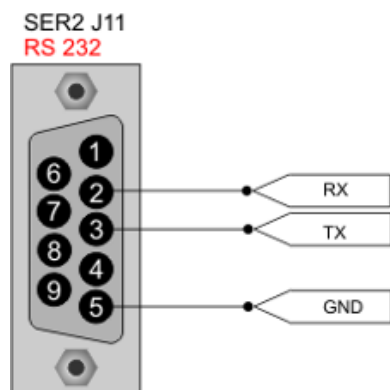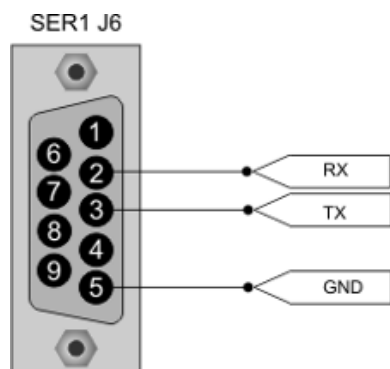

WARNING

**DO NOT EXCEEDS THE MAXIMUM VOLTAGE VALUE ADMITTED
BECAUSE THE CARD CAN BE DAMAGED**

4.3 CAN BUS Port

The port CAN BUS allows the communication of the card NGMEVO with type devices for motors drives, slave of various kinds, encoders, and more.

Communication takes place via the CAN OPEN protocol, based on its specifications DS401 and DS402 as regards the objects and the modes supported.


In terms of data exchange, the line complies with DS301.

The port can be configured as master or slave depending on the firmware present.

The port CAN-BUS meets the specifications of ISO 11898-24V.

4.3.1 Connection CAN BUS

Is possible insert the TERMINATOR RESISTOR, inserting the JUMPER above the power connector.

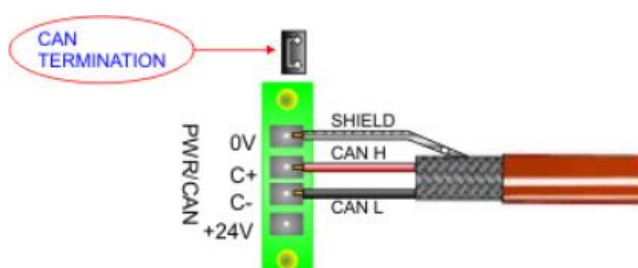


WARNING

If the NGMEVO board is configured as MASTER, insert always the TERMINATOR JUMPER

If the NGMEVO is configured as SLAVE, insert the TERMINATOR JUMPER if the board is the last node in the CanBus.

In another situations, remove the JUMPER

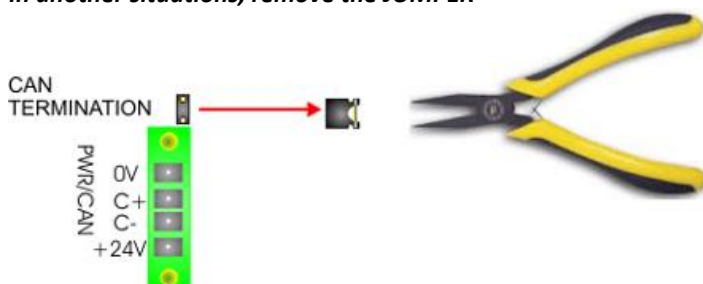

4.3.2 CanOpen Max PDO Number


Normally the max PDO number managed by NGMEVO Canopen system , is **10**.

It is a total for PDO Rx and PDO Tx ex:

7 → PDO Tx

3 → PDO Rx

4.3.3 CanOpen Cable

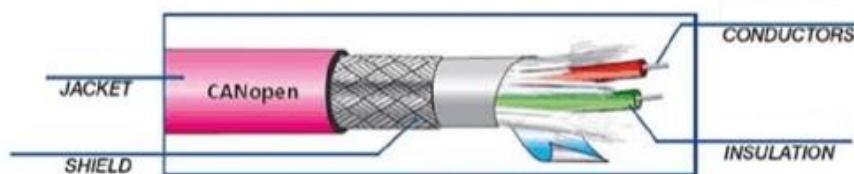

4.3.4 CONDUCTORS ELETTRIC RESISTANCE

22AWG: < 55,4 Ohm/Km

21AWG: < 43,6 Ohm/Km



PAIR CAPACITY

50 pF/m



IMPEDENCE

120 Ohm



TRASMISSION SPEED-CABLE LENGTH

Baud rate 1Mb Length Max 25 Mt

Baud rate 800 Kb Length Max 50 Mt

Baud rate 500 Kb Length Max 100 Mt

Baud rate 250 Kb Length Max 250 Mt

Baud rate 125Kb Length Max 500 Mt



VOLTAGE EXERCISE

30 V

4.4 Ethernet Port

The Ethernet port, allows the **NGMEVO** to communicate with other devices, like PC and others. On data exchange level, it complies 10 BaseT and 100 BaseT standards.

About protocols, it can be used in many ways:

- **NGMEVO** to **PC** communication, about on-line assistance, software and firmware download and other. In this case it's used a PROMAX specific protocol;
- **PLC** and other devices communication, with ModBus **TCP/IP** protocol;


4.4.1 Connections

The on board connector, complies the RJ45 standard,

It's recommended to use PC with Ethernet ports complies this standard. It's recommended to use cables length conformed the standard.

The connection cable can be **CROSSOVER** or **NORMAL**

The port is automatically adapted to cable type

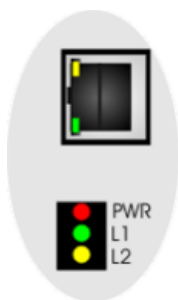


4.5 Analog inputs

The analog converter reads an input voltage from 0 to 10V or 4/20 mA with respect to GND. To get the full scale 12V or 24V, an external resistor must be inserted between the signal and card input. In any case, the value of the input voltage can exceed the full scale is not more than 0.2 V. **The use of analog input, remove automatically a digital input (see the following table)**

Reference table for exclusion digital inputs

Analog Input Configured	Digital Input Removed
1	9
2	10
3	11
4	12
5	13
6	14
7	15
8	16

4.5.1 Analog Inputs Connections J12

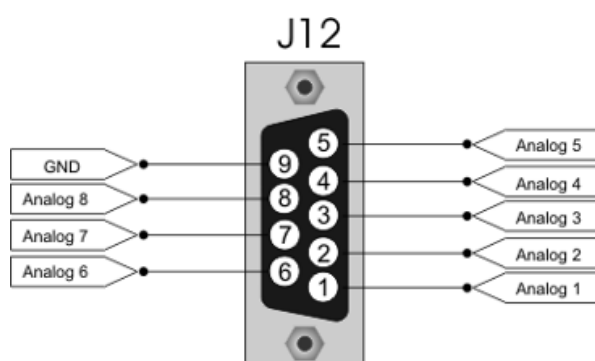


4.5.2 Input Resistance

	MIN	TIPICA	MAX
VDC	25 K Ω		72 K Ω
4-20 Ma		175 Ω	

4.5.3 External resistance for voltages other than 0-10V or 4-20Ma

VIN	Rext
0-12 V	63 K Ω
0-24 V	424 K Ω

4.5.4 Connection example

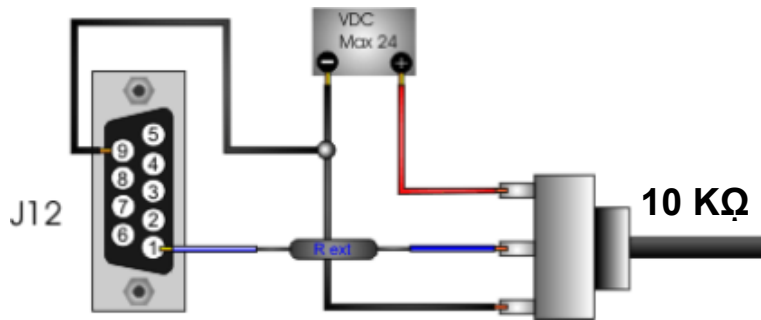


WARNING
DO NOT EXCEEDS 0,2 Volt THE MAXIMUM VALUE SELECTED
THE ANALOG INPUT, CAN BE DAMAGED THE BOARD

4.6 Analog Output on NGMEVO

The NGMEVO board, can be configure one analog output 0-10V

4.6.1 Electric characteristics

		U.m.	Min	Max
Analog Output	Voltage	Vdc	0	10

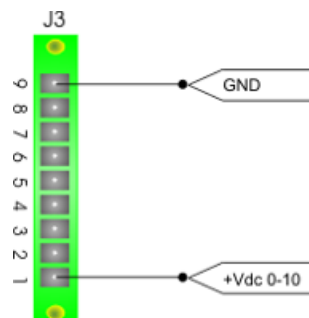

WARNING
THIS CONFIGURATION, ELIMINATES THE DIGITAL OUTPUT 1

4.7 Channels STEP/DIR

The board NGMEVO can use, up to four channels STEP / DIR for a total frequency of 400 KHz in position mode (125 KHz in interpolation mode).

The outputs can be configured with **OPEN COLLECTOR** signals, or **LINE DRIVE**.

4.7.1 OPEN-COLLECTOR

POWER	MAX 48 VDC
LOAD	100 Ma continuativo 500 Ma picco
STATE ON (voltage)	MIN 0V MAX 1V
FREQUENCY	MAX 30 KHz

4.7.2 LINE DRIVE

OUTPUT DIFFERENTIAL	MIN 2.2V MAX 3.3V specific TIA/EIA-422-B (RS422)
FREQUENCY	MAX 400 KHz in position mode – 125 KHz in interpolation mode




specifics TIA/EIA-422-B (RS422)

LOAD	V Min	V Typical
3,9 K Ω		3,2 V
100 Ω	2	2,6 V






WARNING
USE A CABLE WITH SHIELD FOR THE CONNECTIONS

4.7.3 Connections OPEN COLLECTOR J13 /J14

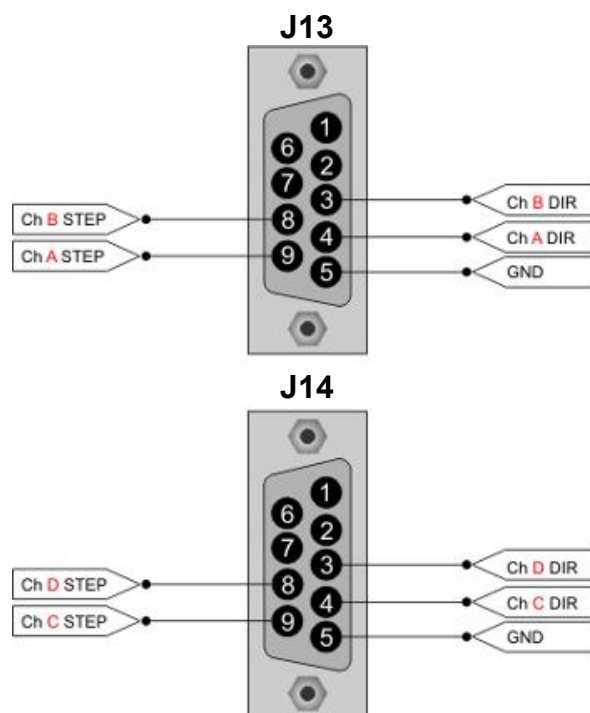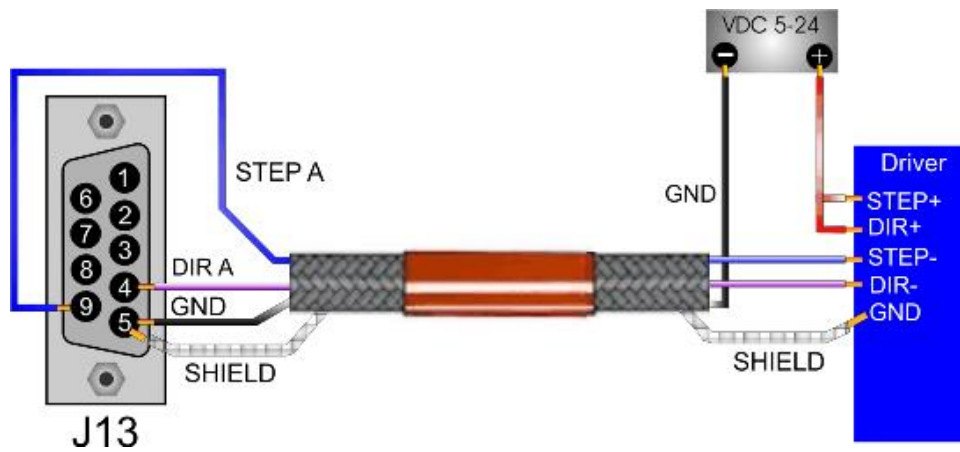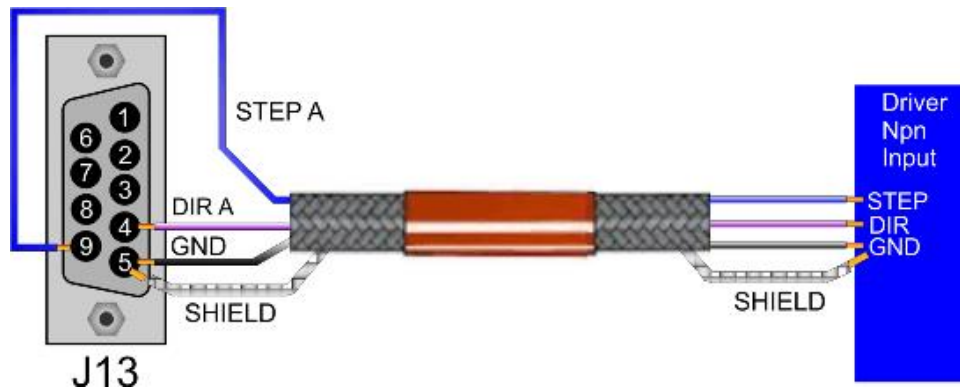

4.7.4 Connections LINE DRIVE

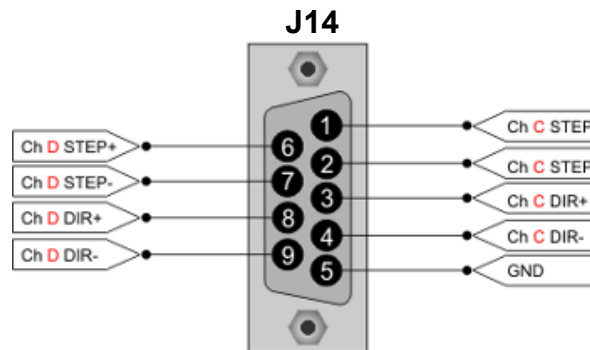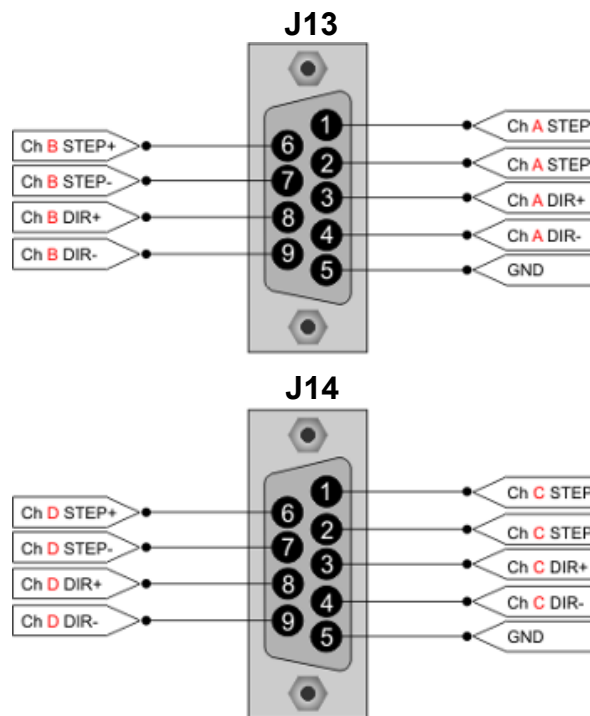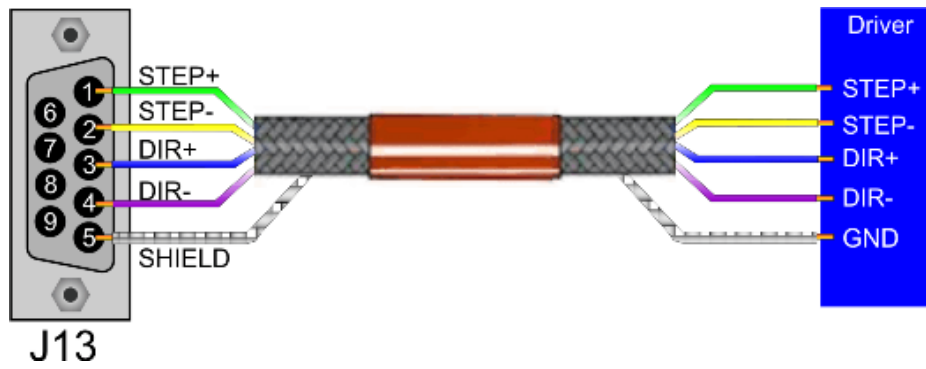


4.8 Digital Inputs

All these signals are PNP Type optically isolated. Therefore, to enable an input must bring a positive VDC (24 Vdc typical) on the desired channel refers to the common inputs.

4.8.1 Electric characteristics

		U.m.	Min	Standard	Max
State On		Vdc	10	24	28
State Off		Vdc	0		4
Delay	ON	ms			3 (@ 24Vdc)
	OFF	ms			2 (@ 24Vdc)
Current		mA	4 (10Vdc)		14 (@ 28Vdc)

4.8.2 Connections J1/J2

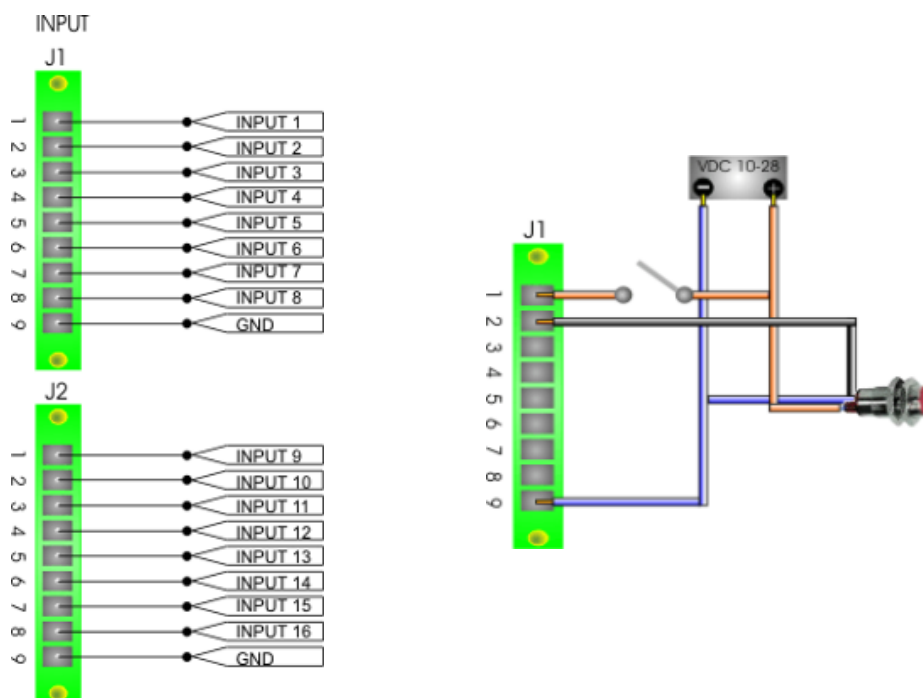

WARNING

DO NOT EXCEEDS THE VOLTAGE LEVEL ABOVE DESCRIBED


4.9 Digital Outputs

These outputs are optically isolated with respect to GND. In order to function should therefore feed them separately with a voltage of 24 Vdc. The load is driven by a transistor of the PNP type which when activated will provide a positive voltage equal to the voltage supply of the outputs. On the card there is a protection diode so you can also directly drive inductive loads. In case of inductive loads with absorption greater than or equal to 1 A or when the cable connection between the load and board exceeds a length of 3 meters, you should put the protection diode also close to the load (diode type 1N4007 or similar).

4.9.1 Electric characteristics

		U.m.	Min	Standard	Max	Note
Power		Vdc	10	24	30	
Load		A		1		Continue ($T_{amb} 25^{\circ}$)
		A		2		Duty Cycle 25% ($T_{amb} 25^{\circ}$)
		A			6	Peak (10 ms non ripet.)
Delay	ON	μs			5	
	OFF	μs			30	

4.9.2 Connections J3/J4

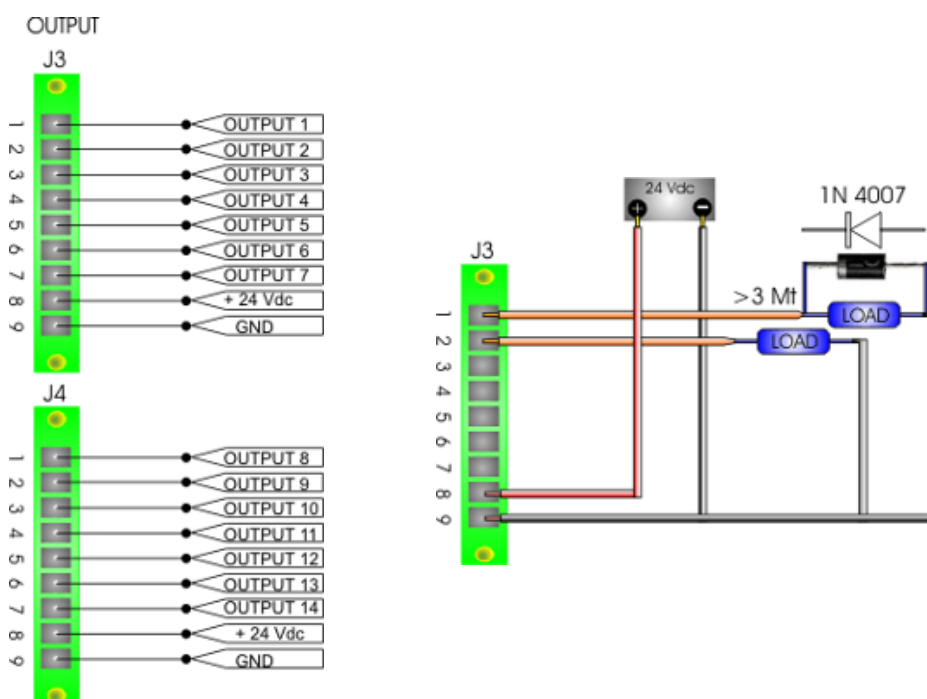

WARNING

**DO NOT EXCEEDS THE VOLTAGE LEVEL ABOVE DESCRIBED
THE DIGITAL OUTPUTS, ARE NOT PROTECTED BY OVERLOAD OR SHORT CIRCUIT**

5 Programming

5.1 Manual Boot

The board usually uses an automatic boot.

In case, the automatic boot is not available, it is necessary to proceed in the following way:

- 1) Run the program NGPROG (if used VTB skip step 2 and 3)
- 2) Set the COM and the type of card NGMEVO
- 3) Load the application. SREC and press TRANSFER APPLICATION
- 4) Press the keys simultaneously within 15 seconds RESET AND BOOT on the board
- 5) Release the RESET button

5.2 Upload VTB application

For upload VTB application, is possible use the following mode:

The board NGMEVO is automatically in BOOT MODE (if is not available, see 5.1) when you use the BUTTON UPLOAD APPLICATION. The application is automatically RUN when the transfer is finish.

5.3 NGPROG

The application was developed by Promax NGPROG to allow the update software and firmware of the new controls based on μ P ColdFire.

5.3.1 Upload firmware

- 1) Press button **"FIRMWARE MANAGEMENT"** on NGProg
- 2) If you use **"UPDATE da File"** use the standard windows Browser for find the .SREC file
- 2) If you use **"UPDATE da Server"** you must have a internet active connection, NGPROG search in Promax server the new version of firmware
- 3) Select the serial port to PC and NGMEVO (or NGM13 if not present) board type
- 4) Start the upload firmware

5.3.2 Upload VTB application

- 1) Select the NGMEVO (or NGM13 if not present) Board
- 2) Select the COM on PC
- 3) Select the .SREC file by button **"LOAD"**
- 4) Start the upload by button **"Upload Application"**

6 Status Led

ST-1/L1 (Green led):

- Fast blink – board in BOOT MODE
- blink1 sec – application RUN

ST-2/L2 (Yellow led):

- NO BLINK - No activity on RS232 or CAN SLAVE
- BLINK - activity on RS232 or CAN SLAVE

PWR (Red led): Power On

7 NGMIO Connections


The NGMIO board, is an expansion for NGMEVO local BUS:

- **16 Digital Inputs**
- **14 Digital Outputs**


Can Be insert up to 4 expansions NGMIO for a total:

- **80 Digital Inputs**
- **70 Digital Outputs**

The digital I/O are the same specifics to NGMEVO I/O, see Chapr. [4.8](#) and [4.9](#)

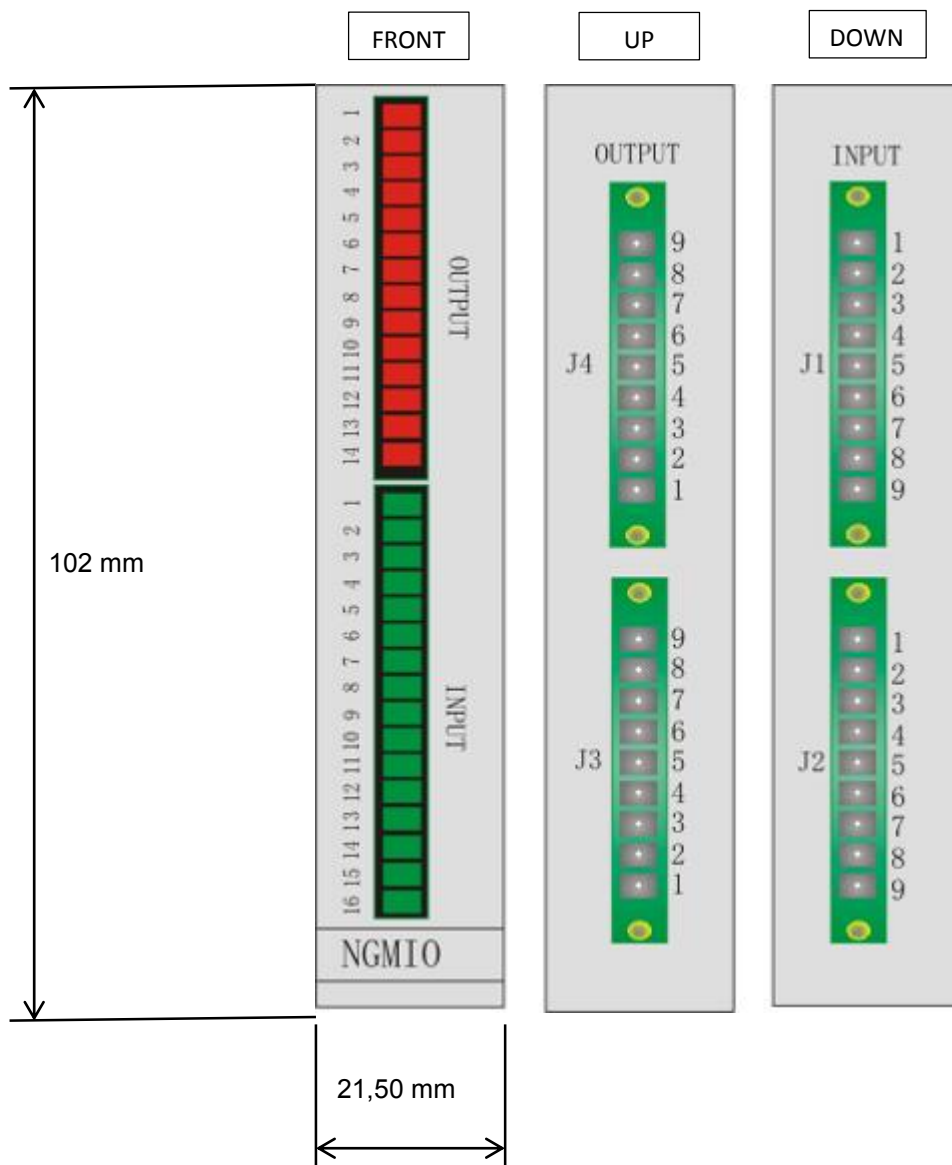


7.1 Connections NGMIO J1/J2

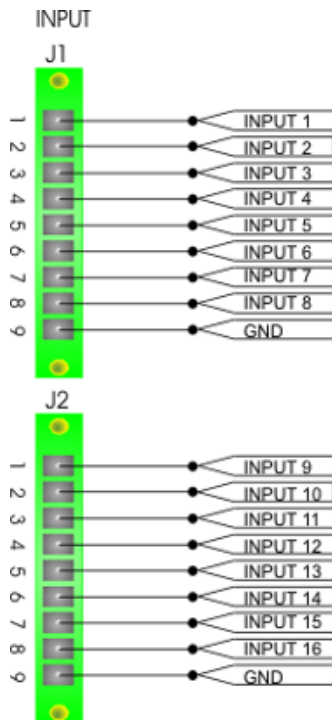

REFER TO CHAPTERS [4.8](#) AND [4.9](#) FOR CONNECTIONS AND WARNINGS

7.2 Connections NGMIO J3/J4

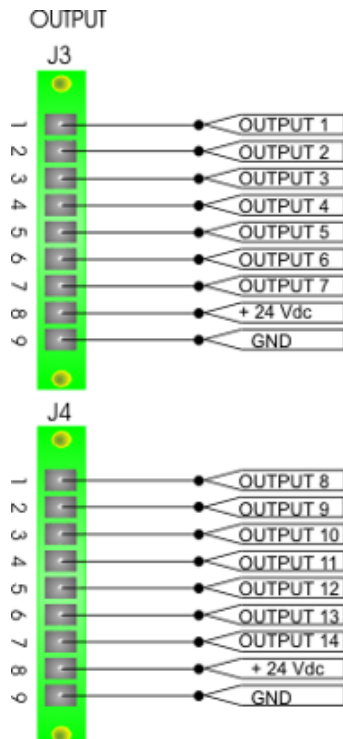

8 NGMsX Connections


The NGMsX board, is an expansion for NGMEVO local BUS:

- 2 Channels STEP/DIR 500 Khz clock interpolation and position mode
- 2 Channels encoder Line Drive 500 Khz
- 2 Analog Outputs +/- 10 V 12 bit

Can Be insert up to 3 expansions NGMsX

Can be managed the following combinations for a NGMsX expansion:



- **2** Channels STEP/DIR
- **2** Channels STEP/DIR and **2** Analog Outputs
- **1** Channel STEP/DIR , **2** Analog Outputse **2** Channels Encoder
- **1** Channel STEP/DIR and **2** Channels Encoder

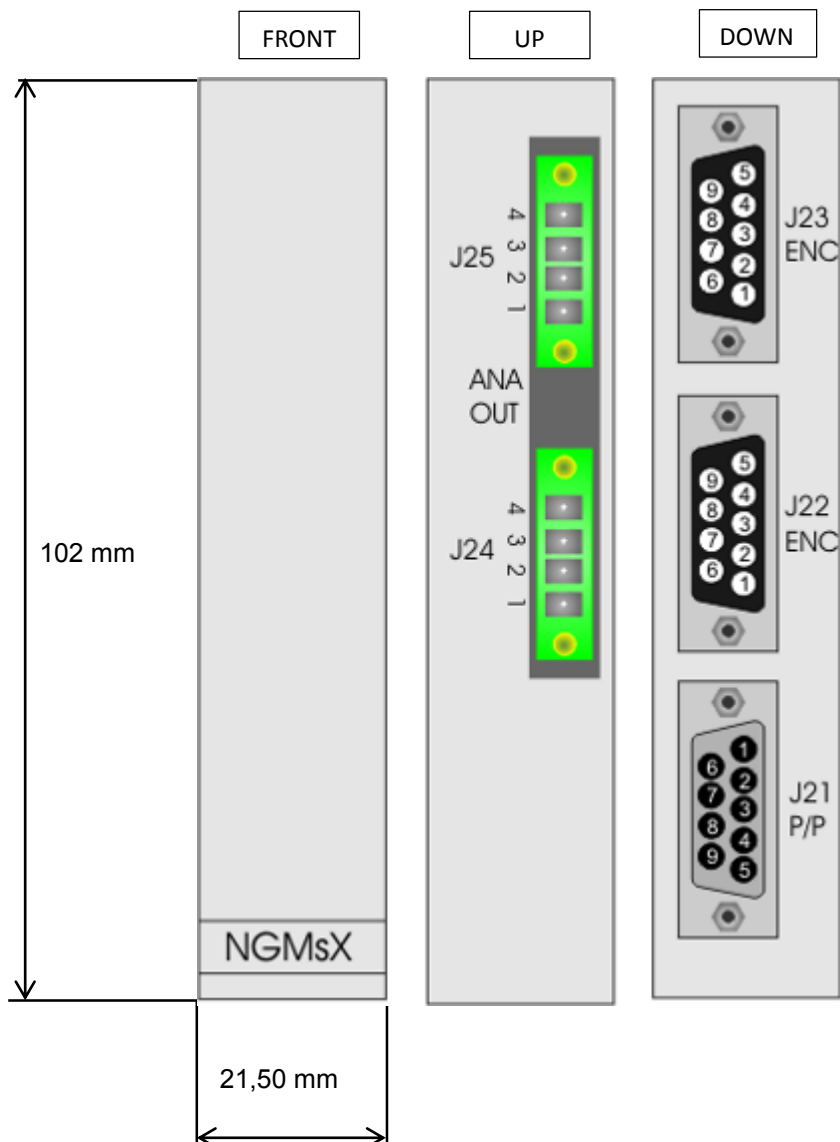

8.1 Channels STEP/DIR on NGMsX Expansion

The NGMsX board can use 2 channels STEP/DIR up to 500 KHz clock for single channel
The outputs are type LINE DRIVE 5V

OUTPUT	MIN 3V MAX 5V
CLOCK	MAX 500 KHz

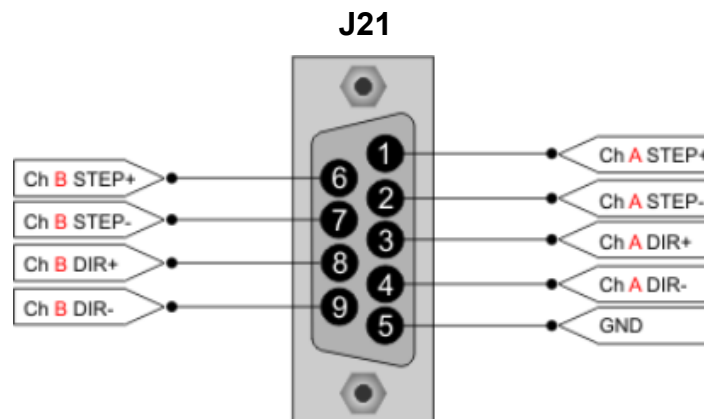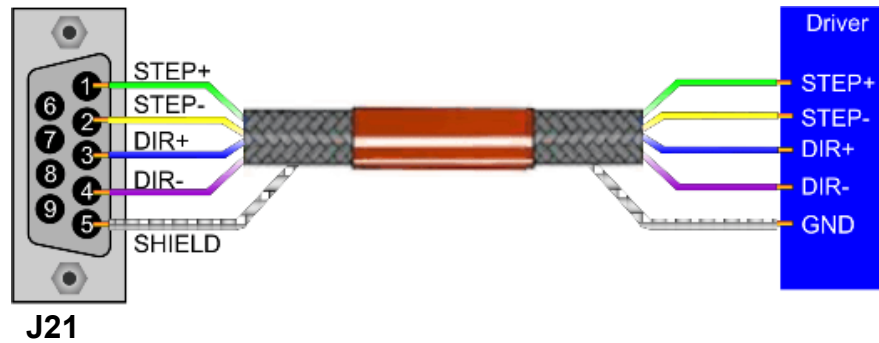

WARNING

USE A CABLE WITH SHIELD FOR THE CONNECTIONS

8.2 Channels ENCODER on NGMsX Expansion

The NGMsX can use TWO channels ENCODER LINE DRIVE up to 500 KHz for channel.

The encoder (or optical line) must be connected with a shielded cable, to prevent electromagnetic interference. It's also recommended to have separated cable for each encoder and put far away the connection by interference sources (inverters, high voltage cable, AC motors, etc.).

NGIO is ready to use LINE-DRIVE encoders, also supplies the +5Vdc source voltage. It can't be used with PUSH-PULL or OPEN-COLLECTOR encoders.


In case of motor-drives encoder simulation, it is not necessary to connect the Vdc supply, but only the GND.

8.2.1 Electric characteristics


		U.m.	Min	Soglia	Max
On voltage level		Vdc	0		0,8
Off voltage level		Vdc	4		12
R input		Ω	6		
Frequency		KHz			500
TO PNP	On level	Vdc	2,5	2,2	7,7
	Off level	Vdc	0		1,5
TO NPN	On level	Vdc	0	1,4	1
	Off level	Vdc	2		7,7

8.2.2 Electric characteristics +5vdc output encoder supply

Channel	Min	Max	Output Current
Ch1 J22	4,75 Vdc	5,25 Vdc	100 Ma
Ch2 J23	4,75 Vdc	5,25 Vdc	100 Ma

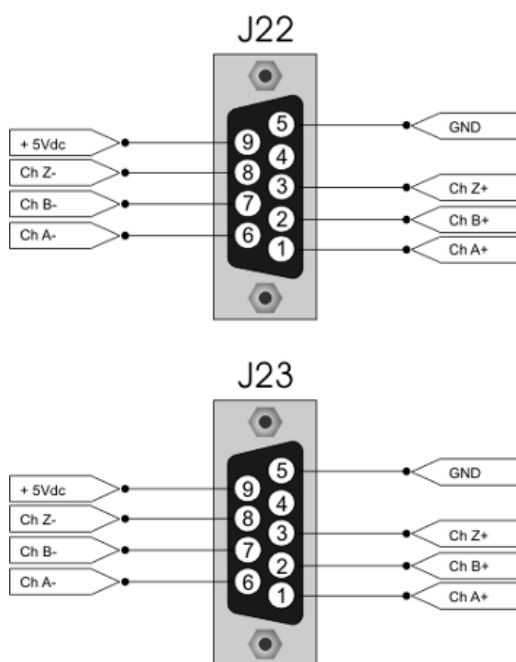

8.2.3 Example

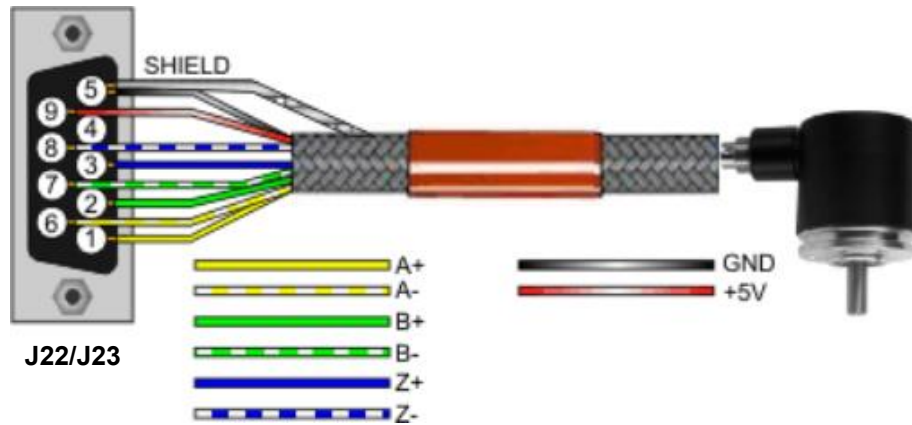

WARNING


USE A CABLE WITH SHIELD FOR THE CONNECTIONS

8.3 Analog Outputs on NGMsX Expansion

The NGMsX board can use TWO analog outputs ± 10 V 12 bit and TWO RELE' CONTACTS

8.3.1 Electric characteristics


		U.m.	Min	Standard	Max
Analog Output	Output voltage	Vdc	-10		9,995
	Output impedance	Ω	250		290
Relè Conctat	Voltage	Vdc			35
	Current	A			1

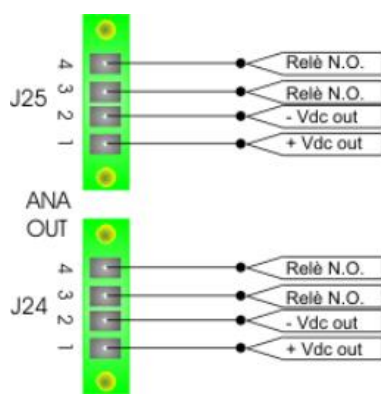

WARNING

USE A CABLE WITH SHIELD FOR THE CONNECTIONS

9 Dimensions

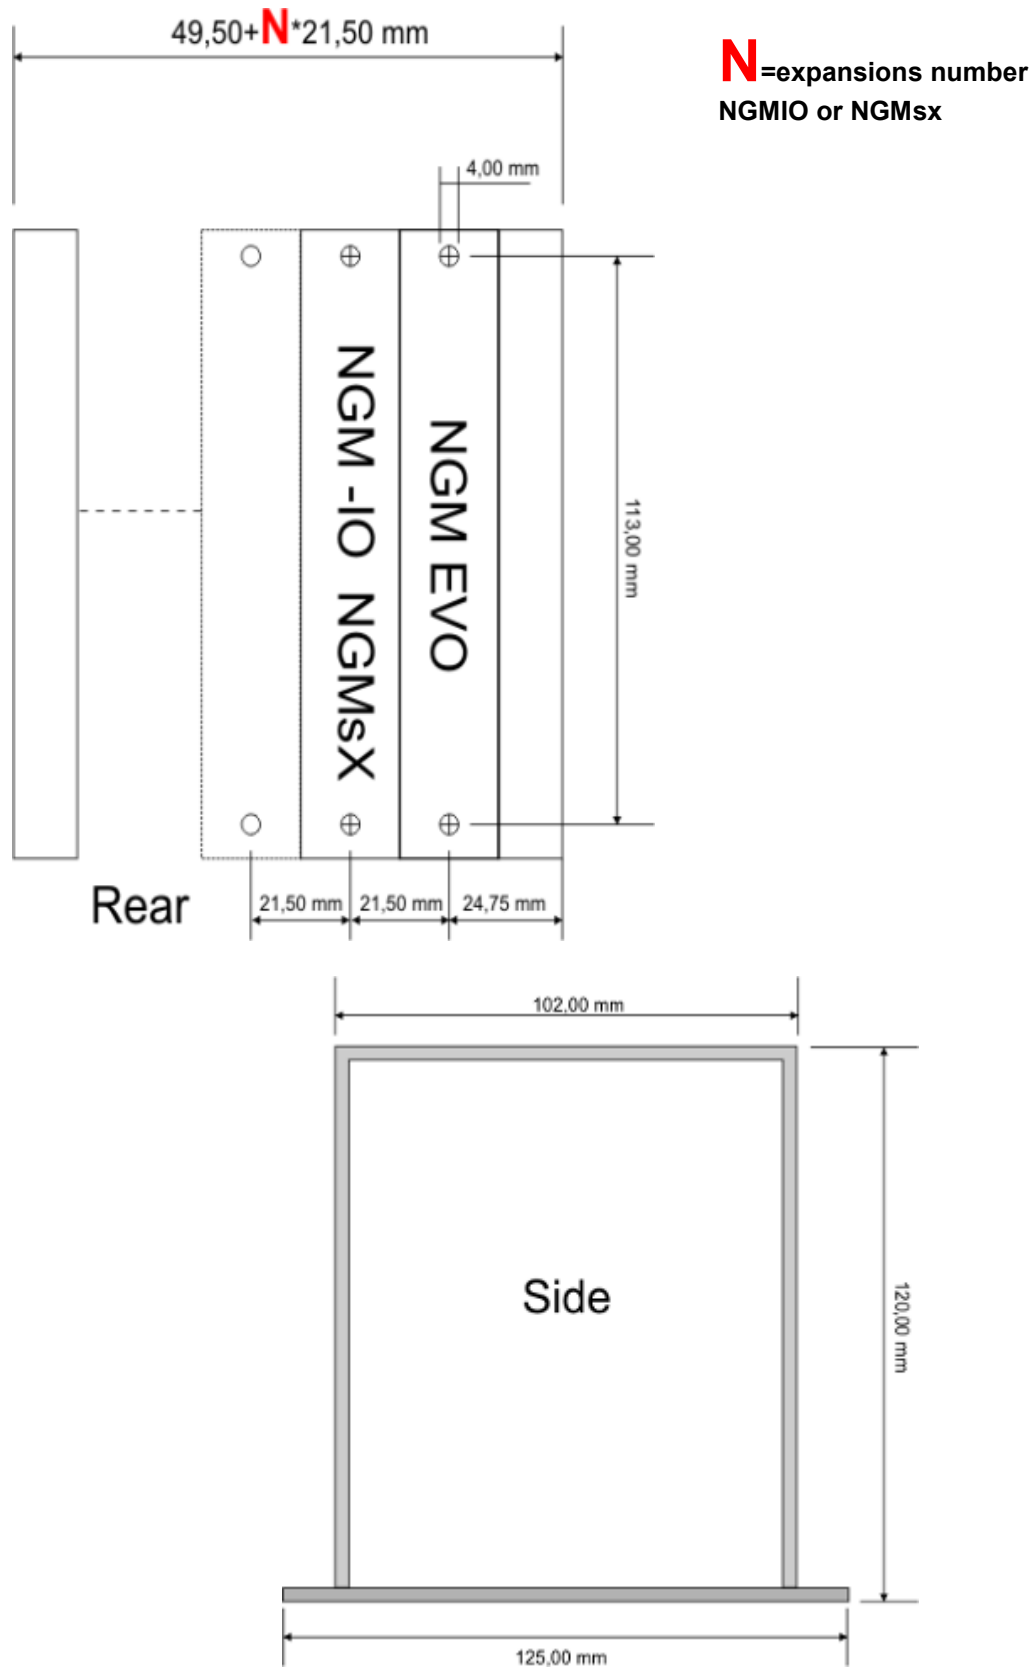

10 Notes on the CE legislation

NGMEVO

We have two directives about electronic devices, regarding the NGMEVO : the 2006/42/CE (machine directive) about safety use of the devices and 2004/108/CE about electromagnetic compatibility.

About the first (machine directive) electric/electronic devices, must complies the "low voltage" directive (2006/95/CE) but it can be applied on devices supplied at 50-1000Vac or 75-1500Vdc. NGMEVO works at a voltage of 24Vdc (thus Intrinsically "safe"), so it belongs to "very low voltage" devices (class 0 legislation CEI 11.1), on which it isn't no legislation about.

On electromagnetic compatibility, regarding the 2004/108/CE norm, this device can be classified as a "finished appliance". Due to the fact that the NGMEVO will be normally integrated inside a complex electromechanics system, the machine electric board, by a manufacturer in an industrial ambit and not by a final customer, it haven't any certification duty.

PROMAX however, can institute some specific measure as a pre-compliance, in case of particular demands of costumers, regarding the device electromagnetic characterization.

For example, can be made some measure under the CEI EN 61000-6-1 norm (2007 generic norms – residential , commercial and light industrial ambient immunity) or CEI EN 61000-6-1 (2007 generic norms - residential , commercial and light industrial ambient emission)

Index

.....	2
1 Features	3
2 Identification Code NGM EVO.....	4
3 NGM EVO Connections	5
4 Connections Description	6
4.1 Power	6
4.1.1 Electrical Characteristics	6
4.2 Serial Ports.....	7
4.2.1 Connections J6 SER1/PROG – J11 SER2	8
4.3 CAN BUS Port.....	9
4.3.1 Connection CAN BUS.....	9
4.3.2 CanOpen Max PDO Number	9
4.3.3 CanOpen Cable	10
.....	10
4.3.4 CONDUCTORS ELETTRIC RESISTANCE	10
4.4 Ethernet Port	11
4.4.1 Connections.....	11
4.5 Analog inputs	12
4.5.1 Analog Inputs Connections J12	12
4.5.2 Input Resistance	12
4.5.3 External resistance for voltages other than 0-10V or 4-20Ma.....	12
4.5.4 Connection example	13
4.6 Analog Output on NGMEVO	13
4.6.1 Electric characteristics	13
4.7 Channels STEP/DIR.....	14
4.7.1 OPEN-COLLECTOR	14
4.7.2 LINE DRIVE.....	14
4.7.3 Connections OPEN COLLECTOR J13 /J14	15
4.7.4 Connections LINE DRIVE	16
4.8 Digital Inputs	17
4.8.1 Electric characteristics	17
4.8.2 Connections J1/J2	17
4.9 Digital Outputs.....	18
4.9.1 Electric characteristics	18
4.9.2 Connections J3/J4	18

5	Programming.....	19
5.1	Manual Boot.....	19
5.2	Upload VTB application.....	19
5.3	NGPROG	19
5.3.1	Upload firmware.....	19
5.3.2	Upload VTB application	19
6	Status Led	19
7	NGMIO Connections	20
7.1	Connections NGMIO J1/J2.....	21
7.2	Connections NGMIO J3/J4.....	21
8	NGMsX Connections.....	22
8.1	Channels STEP/DIR on NGMsX Expansion	23
8.2	Channels ENCODER on NGMsX Expansion	24
8.2.1	Electric characteristics	24
8.2.2	Electric characteristics +5vdc output encoder supply	24
8.2.3	Example.....	25
		25
8.3	Analog Outputs on NGMsX Expansion	26
8.3.1	Electric characteristics	26
9	Dimensions	27
10	Notes on the CE legislation	28